

"T" Series Solar Charge Controller manual



This is a three-time controller into the evening (evening) working time, an interval of rest or pause time, Dawn working time (morning light function), the user can according to their needs, set a different time.

A:time (evening working) B:time(Pause working) C:time(dawn working)

This is a compatible MPPT charge controller PWM intelligent / efficient energy saving he not only has efficient MPPT controller charging function to automatically track the maximum power point, 10%~30% higher than the ordinary controller charging efficiency, also has standby energy saving, more than 30% energy than ordinary controller, the standby power consumption of only 10mA-15mA.

1: Product introduction

"T" series of an intelligent, multi-purpose solar charge controller

LCD screen display	Battery reverse discharge protection
Simple and more time control operation	Battery reverse polarity protection
PWM charging mode+MPPT	Battery under voltage protection
Parameter user can rest	Overload, short-circuit protection
Akey to open and close the load	Automatic temperature compensation function
Akey to restore the factory settings	USB5V charge(current 500mA)Optional

2: Installation Instructions

Installation (Installing wires, first loosen the screw counter clockwise.)



① Ready QI installation tools and materials, and cable. Please matching suitable cable

② ensure that the current density < 4A/mm² This will help reduce the line pressure drop. Check the installation site meets the relevant safety requirements, avoid damp, dusty, flammable, explosive and corrosive gases


③ Install the controller fixed to the vertical plane, see Section V mounting aperture and hole spacing. In order to ensure a good controller cooling conditions, the controller on the bottom of each reserved 10cm space

④ As shown on the right wiring sequence: load, battery, solar Battery plate is connected to the controller to be taken to ensure that the load, battery, The polarity of the solar cell panel and controller

⑤ Before use: external temperature sensor probe into the left of the controller temperature probe interface probe placed in similar battery temperature. (Line extension must be built-in devices of the external temperature probe coextensive Otherwise, the controller will control parameters of the temperature compensation of the error

⑥ Warning: In order to prevent accidents from occurring, install: non-professionals can not be engaged in loading and unloading operations

3: LCD operating interface description

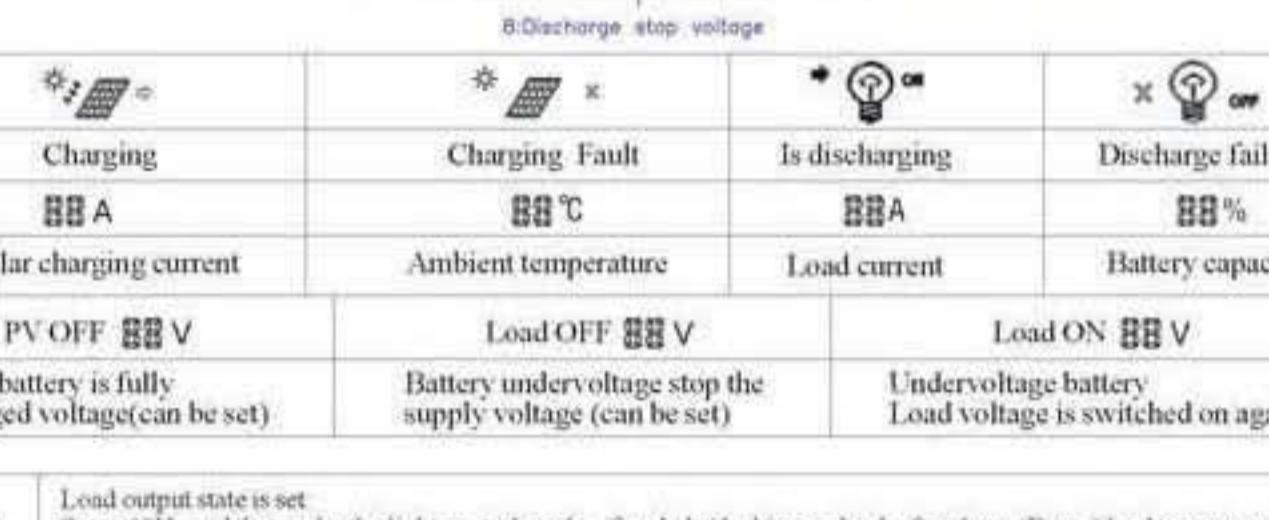

Charging	Charging Fault	Is discharging	Discharge failure
Solar charging current	Ambient temperature	Load current	Battery capacity
PV OFF V	Load OFF V	Load ON V	
Stop battery is fully charged voltage(can be set)	Battery undervoltage stop the supply voltage (can be set)	Undervoltage battery	Load voltage is switched on again

Evening 	Load output state is set Set to 00H, said that under the light control mode, after dark (dusk) open load, after dawn (Dawn) load to stop working. Set to: 24H represents the load has been open until the battery voltage protection automatically disconnects the load. Set time: 01H to 23H, said under the next delay lighting control mode, the load is disconnected for a few hours, the evening open load, delay corresponding values after closing the load. (Means: loading the time delay values)
--------------------	---

Interval 	An interval of time setting (set this time, Dawn to Evening, to stop working load time) Set to: 00H indicates Evening to Dawn without the interval or intervals of 0H Set to: 01H to 24H represents Evening to Dawn stopping power load time (corresponding to the numbers indicate the length of time delay)
Dawn 	Load output state is set, the length of the second opening hours or workload. Set to: 00H means no load open or the length of time the load power 0H. Set: 01H-24H said opening a load length of time. (numbers indicate the length of time corresponding to the open load)

Three time periods set: (cases)

Warning: (If(night) setting(00H)or(24H), (time interval and dawn) would prohibit these two time period set))

Evening 00H	Interval -H	Dawn -H
After dark (night) open workload until dawn (dawn) load stops working		
Evening 24H	Interval -H	Dawn -H
Normally open mode, the load has been working until the battery (undervoltage) automatic protection, load stop working	Interval 00H	Dawn 00H
Evening 01H	Interval 00H	Dawn 00H
Interval and Dawn are set to 00H, after dark 1H off load after load of work (can set)	Interval 00H	Dawn 00H
Evening 23H	Interval 00H	Dawn 00H
Interval and Dawn are set to 00H, after dark 23H off load after load of work (can set)	Interval 00H	Dawn 00H
Evening 05H	Interval 07H	Dawn 03H
(Evening) work load 5H, (interval) to stop supplying the load 7H, (Dawn) work load 3H (can set)		

Time Status	Evening	Interval	Dawn
Set	00H (Light control mode)	Setting prohibited	Setting prohibited
Set	24H (Normally open mode)	Setting prohibited	Setting prohibited
Set	01H--23H(Any value)	00H--24H (can set 0-24)	00H--24H (can set 0-24)
Set	01H--23H(Any value)	00H (No time interval, direct execution of dawn working time)	00H (Load operating time 0H)
Set	01H--23H(Any value)	01H--23H (Stop halfway load hours(H))	01H--23H(Open the load again working hours(H))

4: Function keys: Set and save ≥ 5 sec Auto save and restart

Toggle key "+" Set parameters "plus" "-" Set parameters: "minus" Manual switch load

PV OFF → LOAD OFF → LOAD ON → Evening → Interval → Dawn (Set order (automatic cycle))

This button can be "manually" open load or manually close the load. Long press and hold this button for 5 seconds to restore the factory settings. "*" error or system failure, click this button, you can troubleshoot or eliminate "x".

5: Charging Problem Solution

- No proper installation of solar panels cable polarity ("+/-") Removing the polarity, you can re-install the correct
- More than the rated power of solar panels to reduce solar panel power does not exceed the rated power controller
- Removing the load is not properly connected to the load, reinstall the correct
- More than the rated load power to reduce load power, the controller does not exceed the rated power
- Instantaneous starting current is too large, the battery capacity is too small, the replacement of high-capacity batteries, button troubleshooting
- Wire cable polarity loose or too square and increase retightening bold cable
- All keys can troubleshoot faults, press 5 seconds to restore factory settings

6: Parameter table

Parameters/Model	MPPT10	MPPT20	MPPT30	MPPT40
Maximum power current	12A	20A	30A	40A
Installation Line (mm)	4mm	8mm	10mm	12mm
Installation Line(AWG)	10(AWG)	8(AWG)	7(AWG)	6(AWG)
Weight	280g	360g	475g	500g
Peak power of solar cell panel (Max Wp)	50W-130W	50W-260W	50W-380W	≤500W
Battery capacity configuration	≥100AH	≥200AH	≥300AH	≥400AH
Dimensions	143×89×46 (mm)			187×97×61 (mm)

7: Original value

Battery float voltage 13.8V (12V system) / 27.6V (24V system)

Battery (under voltage) protection 10.6V (12V system) / 21.2V (24V system)

Battery (under voltage) recovery voltage 12.6V (12V system) / 25.2V (24V system)

System load loss ≤13mA

Operating Temperature -10°C~60°C

Humidity requirements ≤90%, No condensation

Maximum open circuit voltage of the solar panel 18V-24V (12V system) / 36V-48V (24V system)

Solar panels maximum open circuit voltage (V) ≤48V